



Illustration No	Description	Part No
1	Housing	90330
2	Wearing Plate	90325
3	Lever Socket	90331
4	Rack Bar	90332
5	Cotter Pin	93775
6	Cap	90326
7	Cap Pin	80268
8	Lifting Pawl	90962
9	Retaining Pawl	90333
10	Retaining Pawl Pin	90963
11	Trunnion Bearing	90317
12	Trunnion Bearing Key	90328
13	Spring Link Lever	90964
14	Spring Link, Complete	90252
15	Reversing Lever	90439
16	Reversing Lever Expansion Rivet	90440
17	Side Plate	90965
18	Cotter Pin- Side Plate	93781
19	Capacity & Instruction Label	98524